

# **Bluefin LED Underwater lights.**

#### Mako

### M12IFM12V,M12IFM24V/M24CCIFM Installation manual.

Thank you for choosing Bluefin LED underwater lights, our products have been designed and tested rigorously to ensure the optimum performance and longevity.

All Bluefin Led lights are water tested so please be aware there may be moisture present on the light. This light is designed for use on fibre glass hulls only and **not to be mounted to any Metal hull or your warranty will be void. If you are mounting to a Metal hull boat a Delrin isolation sleeve can be purchased.** 

Please ensure that your product is installed as per our instructions below, failure to do so may invalidate your warranty.

If you are installing a M24CC please refer to the Driver instructions for electrical installation. Specs: electrical/fuse ratings

- p										
		Voltage	Current	Fuse rating 8amp						
	Mako M12IFM12V	12V only (Absolute min of V	12v-5Amp							
		10V under load @ light).								
	Mako M12IFM 24V	24V only (Absolute min of V	24V-2.6Amp	8amp						
		20V under load @ light).								

# Warnings:

- Do not attempt to install the lights whilst the boat is in the water.
- Ensure that the correct voltage is used for the light.
- Ensure that an in line fuse is installed with the correct fuse rating per the light installed.
- Do not remove the inline HYDRO LOCK or your warranty will be void.
- Ensure the Gel Connector supplied is used or your warranty will be void
- Do not hold the light by the cable.
- Do not use abrasives on the lenses.
- Lights must be mounted a minimum of 300mm from any Anodes.
- Do not mount lights directly underneath Anodes.
- Do not bond directly to Anodes.
- Only bond to the vessels DC bonding system & ensure all connections are in perfect condition & are regularly checked.
- When mounting on any type of conductive surface or hull material full electrical isolation between the light & mounting surface must be provided & maintained at all times throughout the lights life.
- Failure to adhere to any of these requirements will invalidate warranty.
- As Galvanic currents & corrosion are external factors any type of damage caused by galvanic affects are not covered by BluefinLEDs warranty policy.

# **Tools required for installation:**

- 65mm(2.5") hole saw
- Drill
- Marine sealant 3M 5200/4000UV, Sika flex 291i or equivalent (do not use 3M 4200)

#### **Installation:**

For optimum affect effect the light should be positioned between 8-12" (200-300mm) below the water line and at a 90 deg angle.

Recommended spacing from 3-3"(1mtr) to 5-11" (1.8mtrs) between the lights.

Drill a 65mm (2.5") hole for the light access through the hull, ensuring that there are no obstructions internally in the hull.

Key the area to where the light is to be mounted with abrasive sand paper to ensure there is a clean area for the marine sealant to bond too.

Apply marine sealant to the rear of the light on the circumference of the light and around the base of the tube to ensure a complete continuous bead of sealant is applied in both areas. (See fig 2) Feed the light through the hole and clamp internally in the hull using the clamping ring and washer supplied ensuring a tight fit using the nuts and bolts supplied. (See fig 3 and 4)

Wipe off any excess sealant and ensure the light is seated correctly without any gaps in the sealant. (It is good practice to have excess marine sealant to clean off as this can ensure that there is a water tight seal to the hull)

#### **Electrical connection:**

It is advised that if installing M12IFM12V Models no more than 8 lights should be installed on your low voltage system and Mains Power Units should be installed (contact BluefinLED for advice). Ensure you use the IP68 GEL CONNECTOR supplied to connect to the boats wiring or you Warranty will be void (fig 6/7).

# You will notice an inline HYDRO LOCK attached to your cable (Fig 1). If this guard is removed you warranty will be void

Care should be taken when planning your electrical feeds/cables to the lights so as to ensure voltage drop between the batteries or power supply is minimised, on 12V systems this is especially important as the lower system voltage means a high current requirement which in turn means the potential for more voltage drop in the cable runs & connections.

If the cable gauge & connections are not sufficient for the lighting load attached you may experience incorrect operation of the lights & intermittent illumination as the supply dips below specification.

### Please see the wire gauge guide which is attached to this manual.


For help with calculations always consult with a qualified professional or contact BluefinLED directly.



Fig 1

Attach the light cable to the VDC power on the boat ensuring that you use the in line fuse supplied connected to the positive(red) wire, ensure that you use the heatshrink provided to create a water tight fit into the fuse holder. (See fig 5)

Ensure that an earth bond cable is attached to the earth bolt on the locking ring and is attached to the earth bonding system on the boat. (See fig 3)

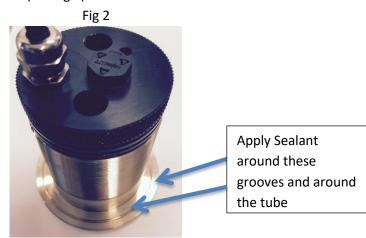

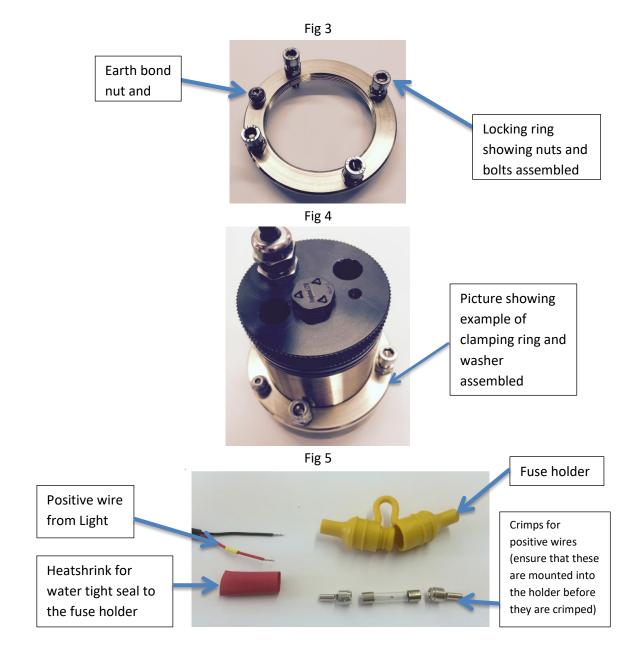


Fig 6 showing how the Gel connector is wired up.

Fig 7 showing how the finished Gel connector should look when finished.

Ensure that the black outer sheath is inside the gel connector.

The IP68 GEL CONNECTOR MUST BE INSTALLED CORRECTLY OR YOU WARRANTY WILL BE VOID.

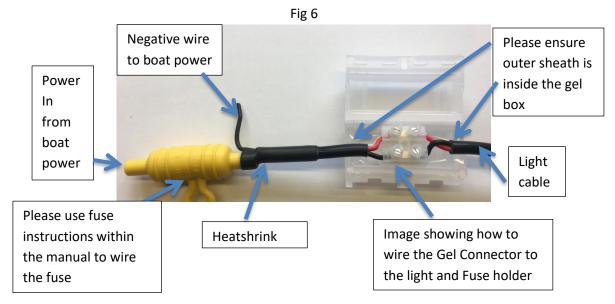


Fig 7



# Testing:

Test the light before installation ensuring that you use the correct voltage and the light is illuminated

After installation ensure again that the light is illuminated correctly before the boat goes back into the water and you remove the lens label.

After you boat goes back into the water check internally for water tightness around where the light is installed.

The light has internal indicator Led's for fault finding, these are as follows:

Over temperature will show RED.(allow the light to cool down and check if submerged)

#### Maintenance:

Regularly check the installation for water tightness

Only clean the light with a soft bristle brush

#### Warranty:

For any warranty issues please contact your point of sale retailer or go to www.bluefinled.com for further

Bluefin LED LTD warrants the lights/hardware it manufactures and produces to be free from defects in workmanship and materials for a period of two years, starting from the date of original purchase, as recorded on the sales receipt.

The warranty is non-transferable and limited to the original purchaser of the product. During the two year warranty period Bluefin LED will repair or replace the defective item (at its option) at no additional charge on a "like for like" basis. Products either repaired or replaced under this warranty shall only be warranted for the unexpired portion of the warranty applying to the original product(s).

Bluefin LED is not responsible for labour charges to remove or replace lights or for haul-out fees. No refunds will be given.

This limited warranty does not extend to any products which have been damaged as a result of misuse, abuse, improper installation/modification, galvanic corrosion, failure to follow and adhere to installation instructions provided by Bluefin LED, improper shipping, neglect, damage caused by disasters such as fire, flood, lightning "acts of god", installation by unqualified personnel.

Do not attempt to disassemble the light without BluefinLED advice.

Installer please ensure that the SERIAL NUMBERS of the lights are written below and the manual is handed over to the end user.

Please make a note of the serial numbers of the lights here.

**SERIAL NUMBERS** 

Bluefin LED

 
Cottage Farm, Cottage Lane, Norton Juxta Twycross, Atherstone. CV9 3QH

Sales - Tel: 07950 909048 Service - Tel: 01827 880450

Administration - Tel: 01827 880450 Email: info@blufinled.com

Registered Address: Square Rig Limited, t/a Bluefin LED, Cottage Farm, Cottage Lane, Norton Juxta Twycross, Atherstone, CV9 3QH Company Registration Number: 08871451 VAT Number: 179 2690 64





										200ft	165ft	130ft	100ft	80ft	65ft	50ft	30ft	20ft	Single colour)	Critical (P series	Power Non	10% V Drop Low-		
										61m	50m	40m	30m	24m	20m	15m	9m	6m	olour)	series	Non	p Low-	Circui	
			130ft	120ft	110ft	100ft	90ft	80ft	70ft	60ft	50ft	40ft	30ft	25ft	20ft	15ft	10ft	6ft	change	& GW P	Power/C	3% V Dr	Circuit Type	
			40m	37m	34m	30m	27m	24m	21m	18m	15m	12m	9m	8m	6m	5m	3m	2m	change Series)	& GW Plus colour	Power/Critical (H, S	3% V Drop High-		
Failure t	then the Then at t	To use fo			EAW/G			8AWG			10AWG		DAMAZT		14AWG	7440				Ų	<del>"</del> Л			Wire Ga
o install	cable di he point	or BluefinLED underwater lights sele	COA	200	6mm		3	CS /				COA	V37	) [mm		CJA	USA HILLICT	1			_			uge sele
Failure to install the correct power feeds may invalidate your warranty, if in doubt please consult with BluefinLED or a qualified professional.	then the cable distance run in one direction i.e. from panel or batteries to the light placement or group. Then at the point the Colum & row crosses read the cable suggestion in US or EU gauges for your installation.		2AWG	4	\$	ANNG	2		O AV AO			8AWG 1		10AWG 6		12AWG <sup>2</sup>	14AWG	16AWG 2.		TO	100			Wire Gauge selection guide using information from ABYC E-11 & US Coast Guard guidelines for marine electrical installations
t power	n in one m & row		CSA	40mm	2	CSA	25mm		CSA	16mm	CSA 6	10mm	CSA	6mm	CSA T	4mm	CSA 1	2.5mm 1		_	_			e using i
feeds ma	direction crosses re				2AWG	10			MANNE C	25	6AWG C	<u>16</u>	CAAAG		CAAAOT		<mark>12AWG</mark> C	14AWG 41		T C	15/			information
y invalic	i.e. from ead the o	ct the ap			ASO THE PERSON		Ç	CSA 24			CSA	16mm	CSA 64	10mm	CSA 84	6mm 10	CSA 12	4mm 14		_	_			on from
ate your	panel or	To use for BluefinLED underwater lights select the appropriate current Colum for you lights, power & quantity from the top row.	Ş	1AWG CSA		C		WG 40mm		C		C	6AWG 16r	C	8AWG 10r	10AWG 6n	12AWG C	14AWG 4mm		707	700			ABYC E-1:
warrant	batterie gestion i		H	_	3	174	CSA	nm	2A	CSA	25mm	CSA	16mm	CSA 6AW	10mm	6mm 8A	CSA 10A						Current	1 & US C
ر, if in dou	then the cable distance run in one direction i.e. from panel or batteries to the light placement or group. Then at the point the Colum & row crosses read the cable suggestion in US or EU gauges for your installa			0AWG	CSA	70mm	N/G	(3)	2AWG CSA	10m	CSA	25mm	CSA	WG 16mm	CSA	8AWG 10mm	10AWG 6mm	12AWG 4mm		707	75/			oast Guar
ıbt please	ght place J gauges f		2 I O A VVO	200		m 0AWG			1000	OAAW7	-	m #AWV			EVINICE IN	m 8AWG	DAVAOT			_	_		flow in Amps	d guidelir
consult	ment or or your i		VVC	<u> </u>		/G	CSA	70mm	i i	CSA	40mm	CSA	25mm	CSA	16mm	/G 10mm	CSA	mm <sub>9</sub>		7	202		ιps	nes for m
with Blu	group. nstallatio	er& qua		310,		2107			0				m WAY		ımı Ozvvo		A SAVVO							arine ele
efinLED	ă.	ntity from the top		3 I O A W G		CIOMANO			OWWG C	1AWG	C									ļ	<b>^</b>			ectrical in
or a quali				4 0		olc	210	COA 210			CSA 1A	40mm 2A	CSA	25mm	CSA	16mm	CSA 6A	10mm						stallatio
fied prof		row.		4   0 AWG		SICHANO	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	AVV	310 VMG	0AWG (	1AWG 70	LAWO	_	47,440		25	6AWG (	16		7	ЛО >			ns
essional						4		<u></u>	2	CSA 21	70mm 0	1			CSA	25mm	CSA	16mm						
•						4 0AWG		SICHWO	o www.	2 0AWG	0AWG	1AWG	ZAVVO 7	AMAC .	74474		DAVVO			9	۷ O ك			
												CSA	70mm		100		CSA	25mm		Ď				